

Wi-Fi Cordless Installation Guide

Setting up your cordless phone with TalkAnywhere is quick and easy! Follow the below instructions and if you have any questions please let us know.

Items included in your phone box



Handset



Rechargeable
Battery



Charging
Station



Handset
Belt Clip



5V Power Adapter

If there are any items that are not included in the box please let us know so we can take care of that right away. Reach out to us at myaccount.cyberlynk.net and include the phone model plus the assigned extension of that phone.

Setting up the phone

Charging Station

Plug the power adapter into a power source socket to start using the charging station.




Charging
Station



5V Power Adapter

Handset

1. Open the battery cover.
2. Insert the battery with the electrodes in the bottom left corner.
3. Close the battery cover.

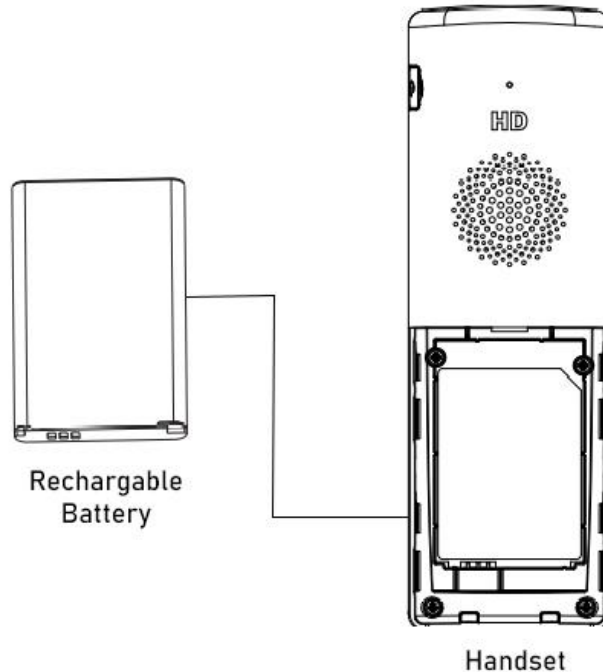

Connecting to Wi-Fi Network

1. On the LCD menu, press the Menu key and navigate to Settings
2. Select Network Settings and then Wi-Fi.
3. Set Wi-Fi to “On” and navigate to “Wi-Fi Settings”
 - a. A list of Wi-Fi networks will be displayed.
4. Select the desired network to connect to. (Enter the correct password to connect if requested)

The Wi-Fi icon will display on top of the main LCD menu if the connection to the Wi-Fi network is successful.

If you need further assistance, please reach out to us at myaccount.cyberlynk.net. Once we receive your request one of our representatives will get back to you as soon as possible to help you with any of your phone system needs.